



How to Install Accessory Spare Wheel & Carrier

A how to detailing the installation of a spare wheel assembly and carrier as an accessory for all models where a spare wheel is not standard equipment.

Written By: David



 **TOOLS:**

- [27mm Spare Wheel Spanner](#) (1)

 **PARTS:**



- [Spare Wheel Holder IMZ-8.1037-21050-10](#) (1)
- [Spare Wheel Nut IMZ-8.1037-21341](#) (1)
- [Spare Wheel Nut Gasket IMZ-8.1037-21347](#) (1)
- [Anti-Vibration Protective Rubber Pads IMZ-8.1037-19118](#) (4)
2015 & Newer Spare Wheel Assemblies
- [Hub Gasket IMZ-8.103-21346](#) (1)
2014 & Older Spare Wheel Assemblies
- [Screw M8-6gx20 ISO 7380 M8x20](#) (4)
- [Washer M8 ZN DIN 125 M8](#) (4)
- [Nut M8-6H DIN 985 M8](#) (4)

Step 1 — Remove Trunk Hinge Hardware



- Remove the two center bolts on the left and right trunk hinges securing the trunk lid.

Step 2 — Install Carrier

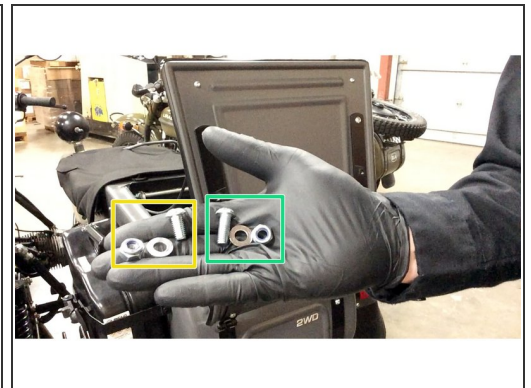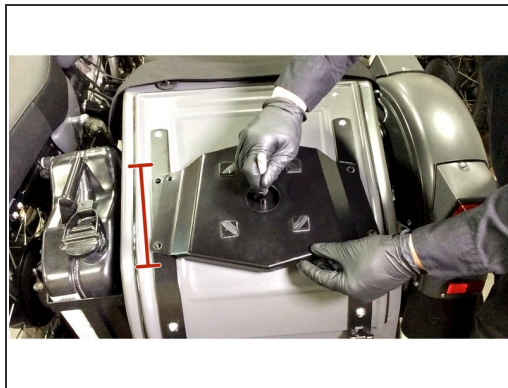

- Place the spare wheel carrier in position on top of the trunk hinges and secure.
 - Spare wheel carrier mounting holes will line up when mounted correctly.
- The removed 4- 8x16mm bolts are no longer required.
- Fasten the spare wheel carrier using 4 - 8x20mm bolts.

Step 3 — Install Protective Rubber Spacers



- i For 2015 and newer disc brake spare tire assemblies 4 - anti-vibration protective rubber pads are required.
- Place spare wheel assembly on carrier and mark hub location on carrier.
- Adhere anti-vibration protective rubber pads to intersect with hub location marks.
- i For 2014 disc brake spare wheel assemblies or 2013 and older drum brake models use hub gasket IMZ-8.103-21346 in place of anti-vibration protective rubber pads.

Step 4 — Install Spare Wheel



- Install spare wheel assembly onto spare wheel carrier.
- i For 2015 and newer spare wheel assemblies, position the spare wheel assembly with spare wheel disc brake adapter placed up.
- i For 2014 disc brake spare wheel assemblies or 2013 and older drum brake models, position the spare wheel assembly with open side of the hub placed down.

Step 5 — Install Spare Wheel Nut



- Install spare wheel nut and secure spare tire assembly to carrier.
- Tighten with 27mm spare wheel spanner P/N 128-24018